

STARK 3800 S (Euro 2) Brushcutter

Documents

Engine

Starter assy and clutch

Tank and air filter

Transmission

Carburettor WT-870

Accessories

Illustrated part list (Head "Load & Go" D.130)

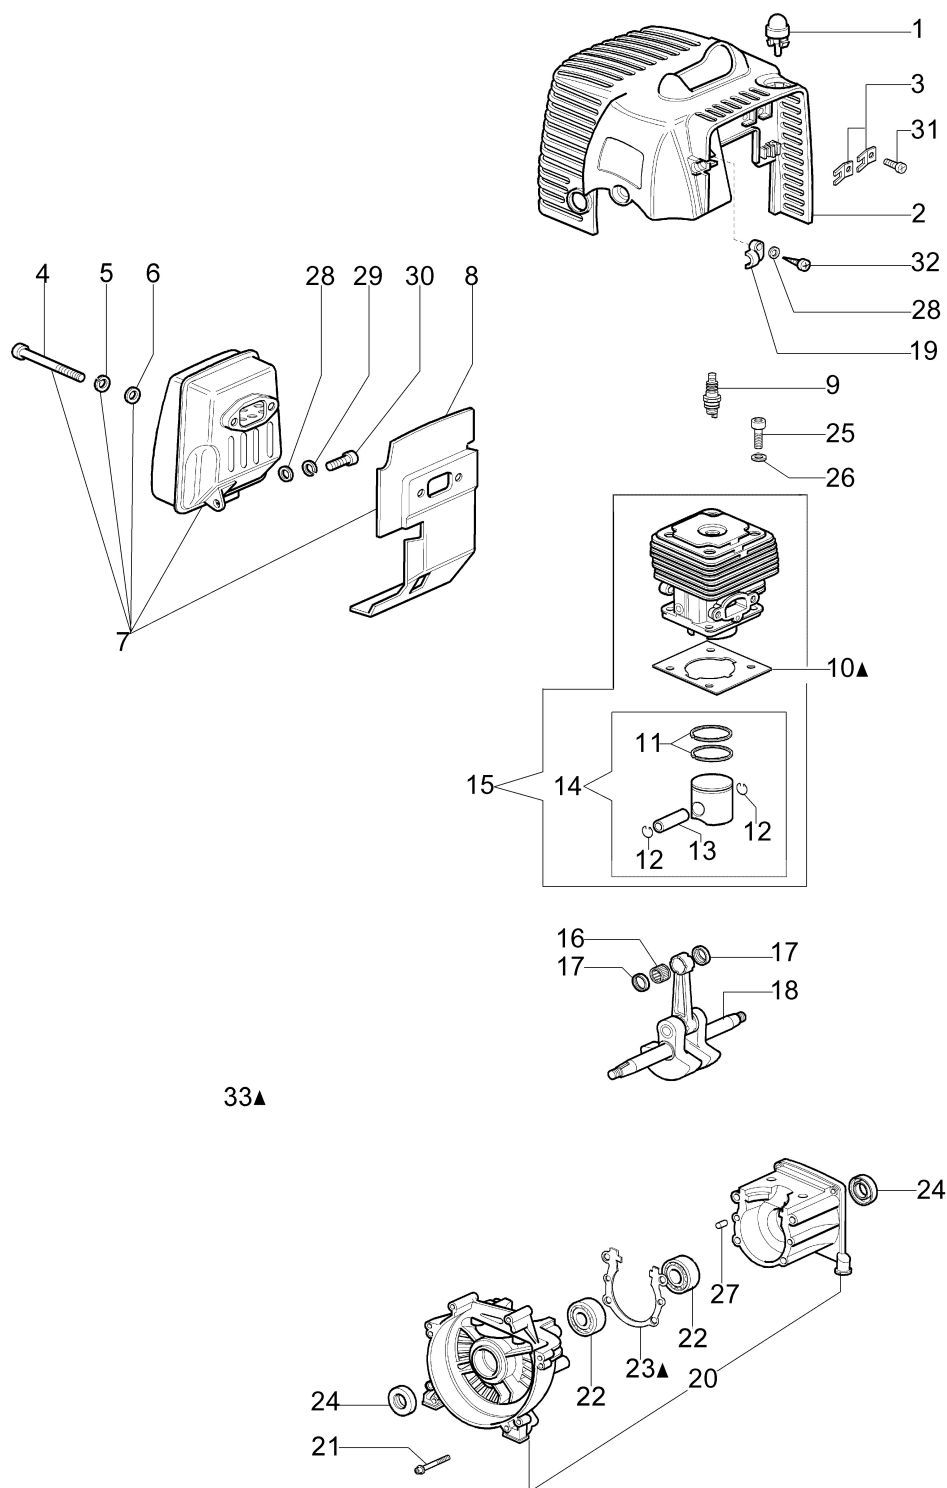


Illustration Engine

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	2318817R	Air purge				
2	1	61210032AR	Cylinder cover				
3	2	4191069BR	Plate				
4	2	3801069R	Screw				
5	2	3819010	Washer				
6	1	3916006R	Washer				
7	1	61250311R	Complete muffler KAT EURO 2				
8	1	61210035R	Deflector				
9	1	3055115	Spark plug bpmr7a				
10	1	61330095R	Gasket				
11	2	4196166R	Piston ring				BT3-114-05/12
12	2	004900061R	Ring				BT3-114-05/12
13	1	50110047R	Piston pin				BT3-114-05/12
14	1	61212004B	Piston assy Ø38	SN 2231076363			BT3-114-05/12
15	1	61212005A	Complete cylinder Ø38	SN 2231076363			BT3-114-05/12
16	1	50110044R	Bearing				
17	2	50110043AR	Spacer				
18	1	61200001R	Crankshaft				
19	1	61200064R	Stopper				
20	1	61350210	Crankcase assy				
21	1	3860096R	Screw				
22	2	094000006R	Bearing				
23	1	61200006AR	Gasket				
24	2	094000099R	Seal ring				
25	4	094000101R	Screw				
26	4	3833073R	Washer				
27	2	3023008R	Plug				
28	1	3916005R	Washer				
29	1	3819006R	Washer				
30	1	3801010R	Screw				
31	2	3960030	Screw				
32	1	3960069AR	Screw				
33	1	61202038AR	Gasket set				

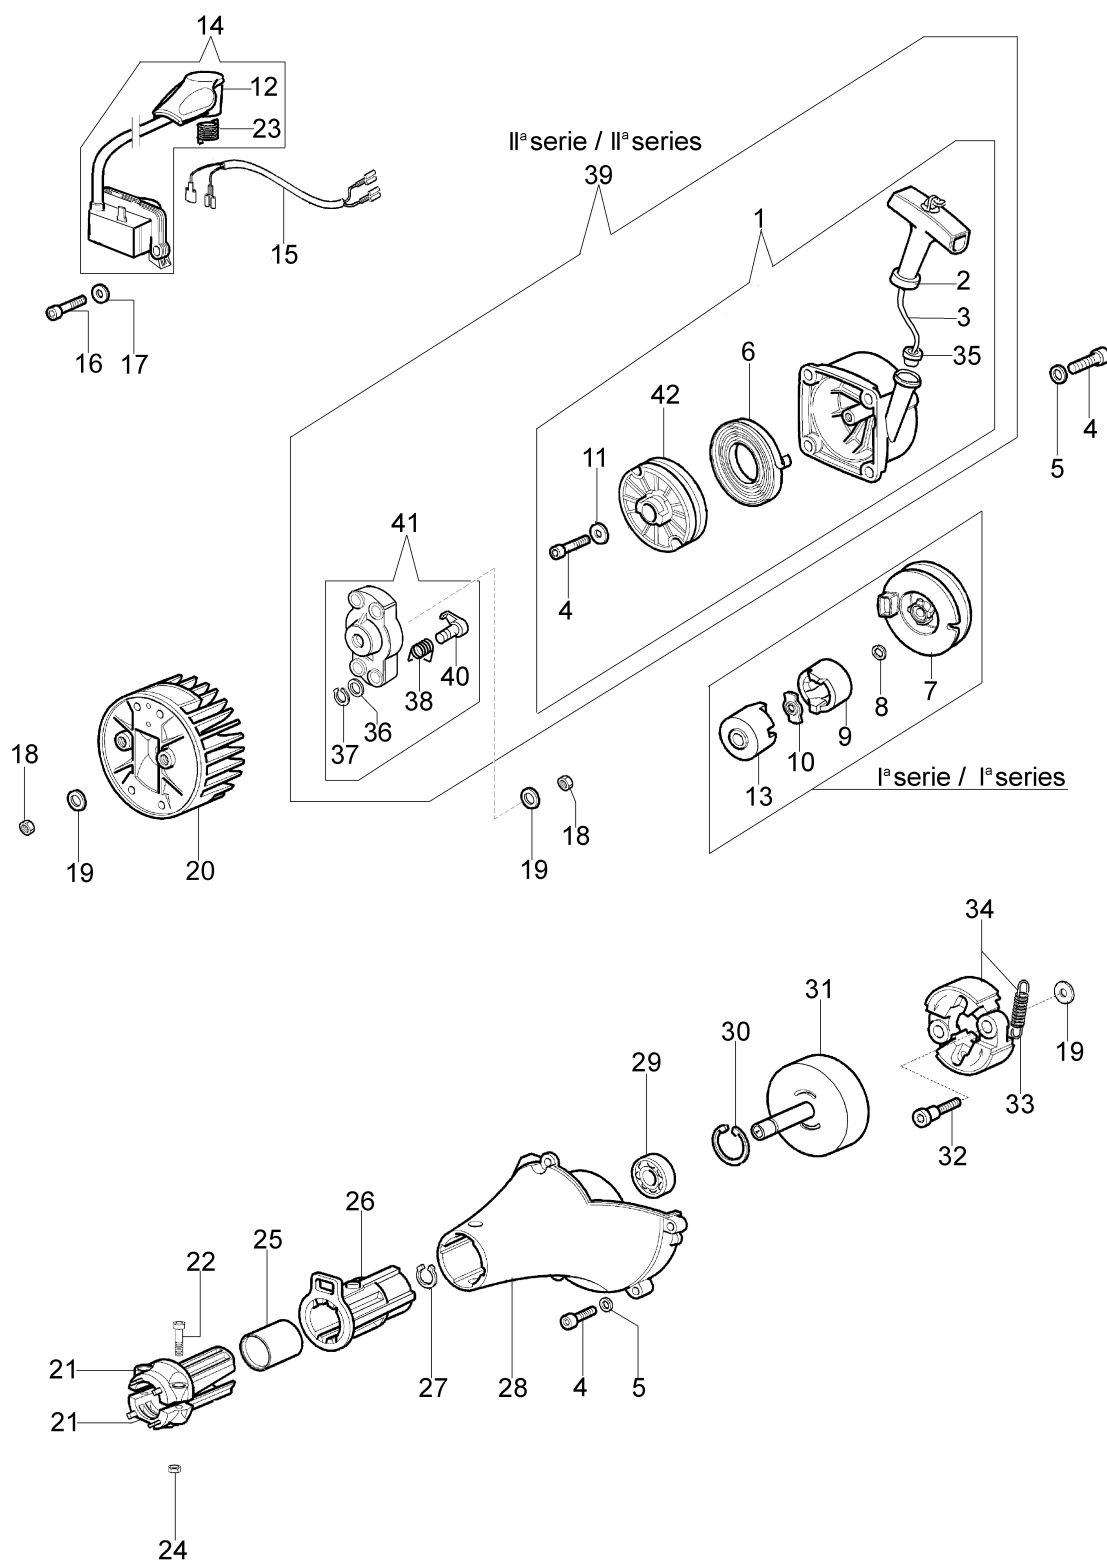


Illustration Starter assy and clutch

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200258R	Starter assy				
2	1	61200015R	Starter handle				
3	1	56520087R	Starter rope				
4	6	3801010R	Screw				
5	4	3916005R	Washer				
6	1	004000132R	Spring				
7	1	56520038AR	Pulley				
8	1	3027005R	Ring				
9	1	56520039AR	Shaft joint				
10	1	56520040AR	Plate				
11	1	3918020R	Washer				
12	1	61200012AR	Spark plug cap				
13	1	61200062AR	Clutch driver				
14	1	61250015BR	Ignition coil				
15	1	61250047R	Cable				
16	2	3801013R	Screw				
17	2	3819006R	Washer				
18	1	3912009	Nut				
19	1	3818011AR	Washer				
20	1	61250014AR	Flywheel				
21	2	61200192AR	Adaptor				
22	2	3801015R	Screw				
23	1	50050127	Spring				
24	2	3914003R	Nut				
25	1	4196038	Bushing				
26	1	4196037R	Sleeve				
27	1	3024015R	Ring				
28	1	61200031AR	Starter case				
29	1	3035042R	Bearing				
30	1	3025022R	Ring				
31	1	4191030R	Clutch drum				
32	1	4191027FR	Pin				
33	1	4191028R	Spring				
34	1	4191153AR	Clutch				
35	1	072700089R	Bushing				
36	2	3064010	Washer				
37	2	3024007	Ring				
38	2	4191017A	Spring				
39	1	61200260	Starter kit assy				
40	2	4191016R	Pawl				
41	1	61252002R	Clutch driver				
42	1	4191018BR	Starter pulley				

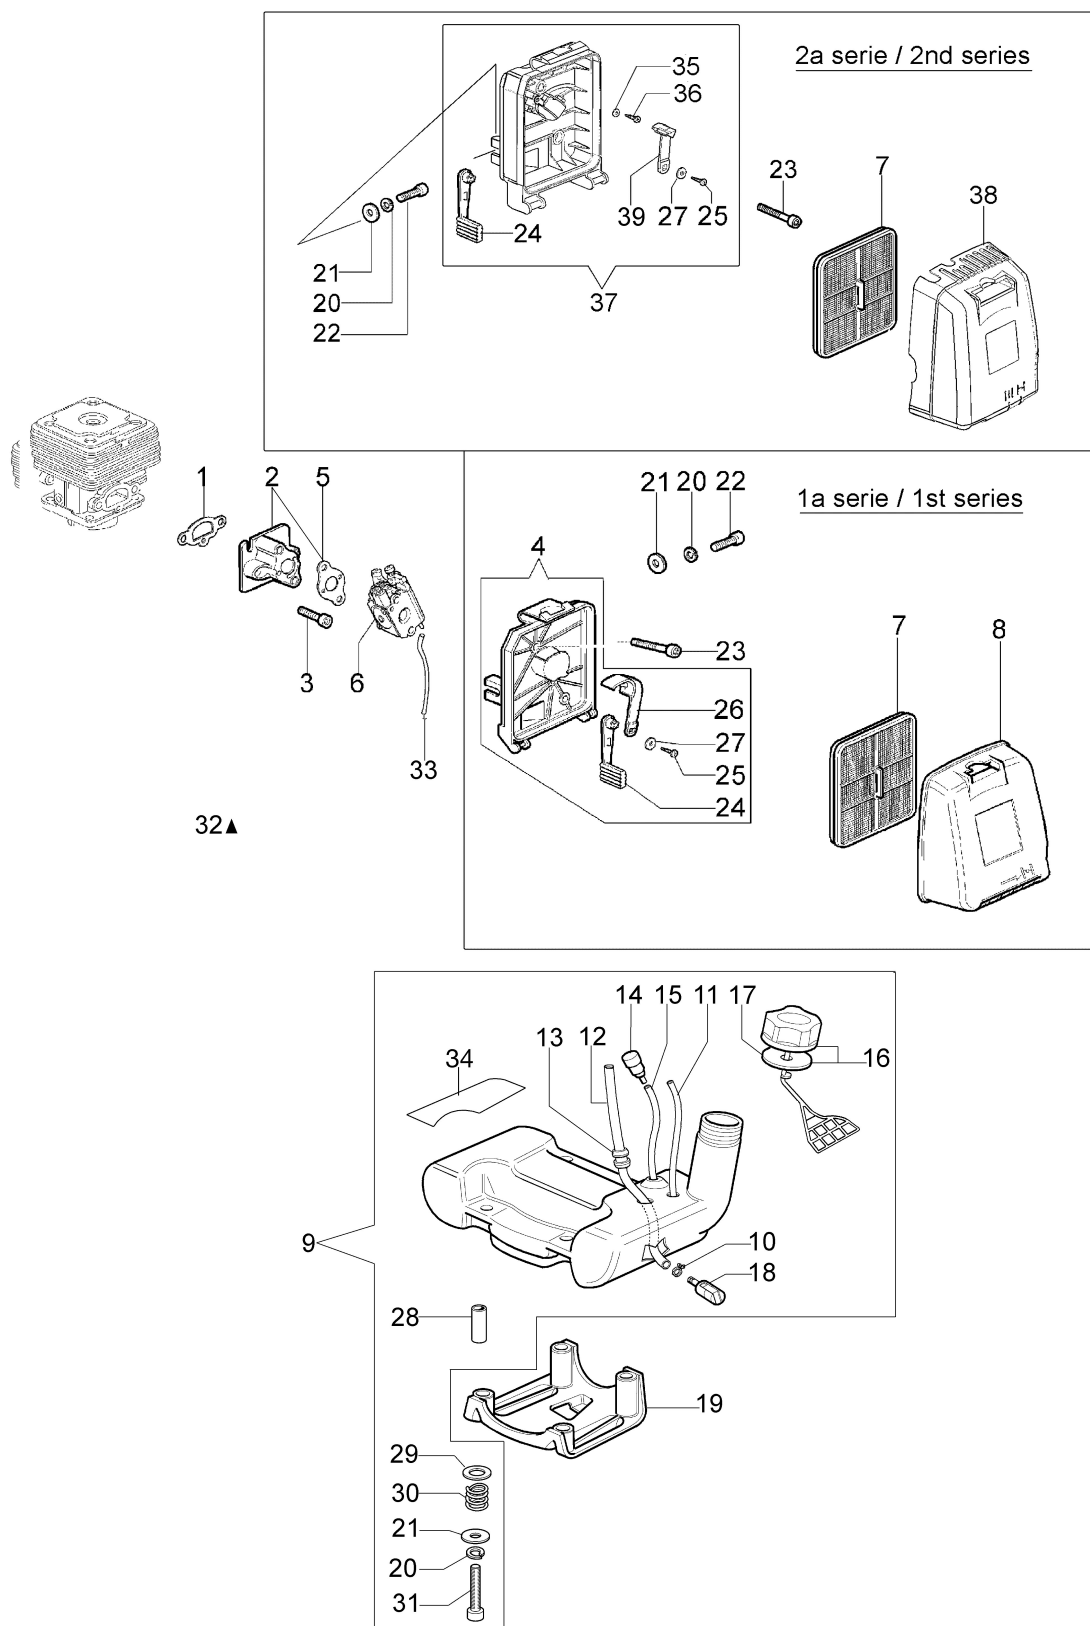


Illustration Tank and air filter

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	61200019AR	Gasket				
2	1	61200198	Insulator				
3	2	3801015R	Screw				
4	1	61212062	Complete support		SN 233526180		BT3-124-04/14
5	1	61200196AR	Gasket				
6	1	2318735CR	Carburetor WT-870B				BT3-124-04/14
7	1	61200025BR	Air filter				BT3-124-04/14
8	1	61200026R	Cover		SN 233526180		BT3-124-04/14
9	1	61200028CR	Complete tank				
10	1	4098377R	Band				
11	1	61200092AR	Tube				
12	1	61200093R	Tube				
13	1	4161211R	Bush				
14	1	61070011AR	Breather valve				
15	1	61250228R	Tube				
16	1	61070079AR	Tank cap				
17	1	61070006R	Gasket				
18	1	094600450R	Fuel filter				
19	1	61200057R	Stand				
20	5	3819006R	Washer				
21	5	3918005R	Washer				
22	1	3801013R	Screw				
23	2	61052009BR	Screw				
24	1	61200024R	Lever				BT3-124-04/14
25	1	3960069AR	Screw				
26	1	61200023AR	Shutter		SN 233526180		BT3-124-04/14
27	1	4120070	Washer				
28	4	61200128R	Spacer				
29	4	3916008R	Washer				
30	1	61200129R	Spring				
31	4	3801016R	Screw				
32	1	61202038AR	Gasket set				
33	1	61250257	Tube				
34	1	61210047R	Guard				
35	1	3916022R	Washer	SN 2233526181			BT3-124-04/14
36	1	3960145R	Screw	SN 2233526181			BT3-124-04/14
37	1	61210130	Air filter support set	SN 2233526181			BT3-124-04/14
38	1	61200205R	Filter cover	SN 2233526181			BT3-124-04/14
39	1	61200204AR	Shutter	SN 2233526181			BT3-124-04/14



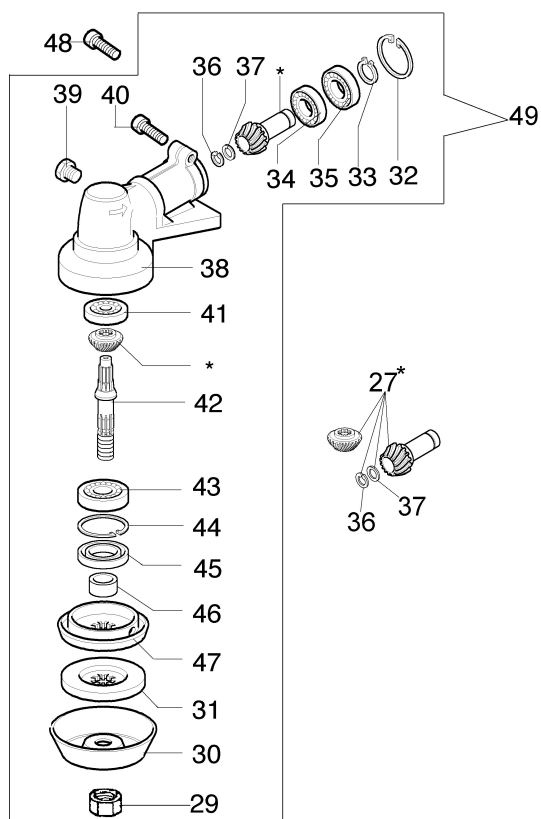


Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	2	3914003R	Nut				
2	3	3801015R	Screw				
3	1	4179194R	Band Ø28				
4	1	61252049R	Tube Ø28				
5	1	61200187R	Drive shaft				
6	6	3918010R	Washer				
7	4	3801017R	Screw				
8	4	3819006R	Washer				
9	1	61040061R	Clamp				
10	1	61042039R	Handle				
11	1	61040050AR	Lever				
12	1	61040057R	Spring				
13	1	61040052	Pawl				
14	1	61040049	Throttle lever				
15	1	61040056R	Spring				
16	1	61040055	Band				
17	1	3960061AR	Screw				
18	1	61040054R	Plate				
19	1	61040053R	Plate				
20	1	61040051	Slide control				
21	3	3960067AR	Screw				
22	1	3801011	Screw				
23	1	61042021BR	Handle				
24	1	4161319A	Grip-end				
25	1	61200045R	Throttle cable				
26	1	61200044R	Cable				
27	1	61040133A	Bevel gear set				
28	1	61042026R	Guard				
29	1	61110075R	Nut				
30	1	61110074R	Guard				
31	1	4179089R	Flange				
32	1	3025019	Ring				
33	1	3024012R	Snap ring				
34	1	3034019	Bearing				
35	1	3035023R	Bearing				
36	1	3025009	Ring				
37	1	4138311A	Ring				
38	1	61040144R	Gear case				
39	1	61040071R	Cap				
40	1	3901016	Screw				
41	1	3034218	Bearing				
42	1	61250054R	Pin				

Illustration Transmission

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
43	1	3034012R	Bearing				
44	1	3025022R	Ring				
45	1	3050018R	Seal ring				
46	1	61040066R	Spacer				
47	1	61040145R	Hub				
48	1	3901008R	Screw				
49	1	61250287A	Bevel gear Ø28				

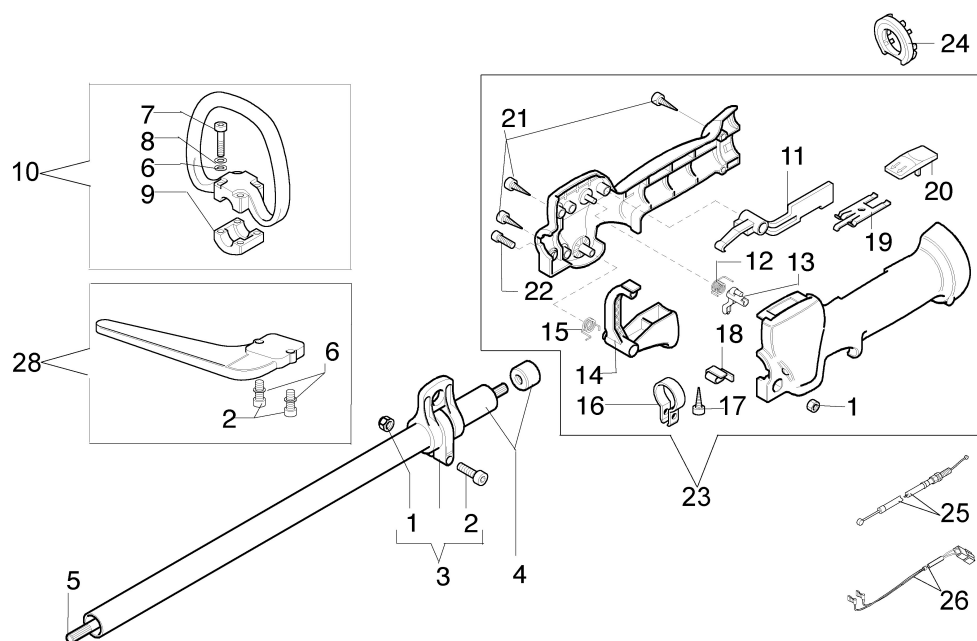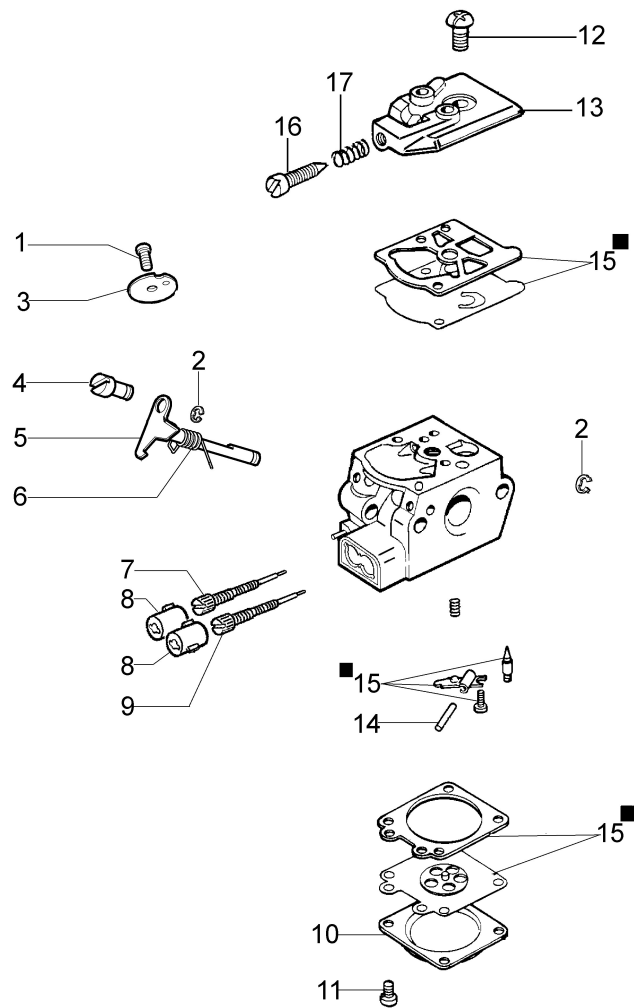

15 ■ KIT RIPARAZIONE
REPAIR KIT

Illustration Carburettor WT-870

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	50010141	Screw				
2	2	095000164	Ring				
3	1	095000141	Shutter				
4	1	2318211	Pin				
5	1	2318786	Shaft				
6	1	094600208	Spring				
7	1	2318736	Adjust. screw				
8	2	2318867R	Caps-lock				
9	1	2318631	Adjust. screw				
10	1	2318191	Cover				
11	4	035000162	Screw				
12	1	003300197	Screw				
13	1	50050107	Cover				
14	1	003300201	Spindle				
15	1	2318671	Repair kit				
16	1	074000240	Adjust. screw				
17	1	094600148	Spring				

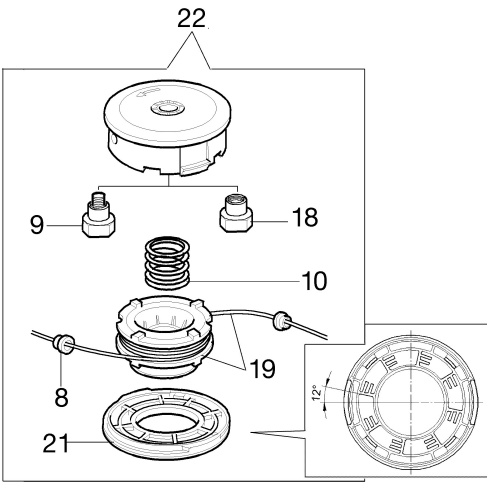
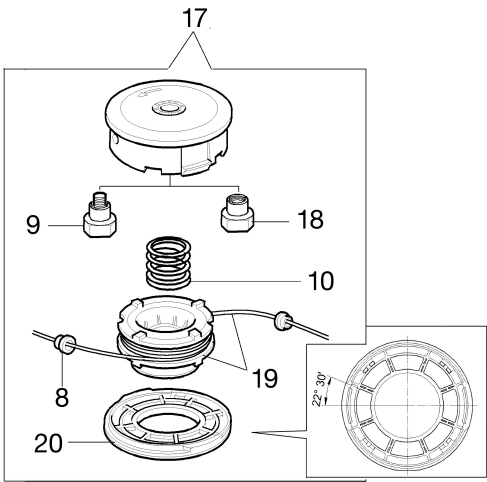
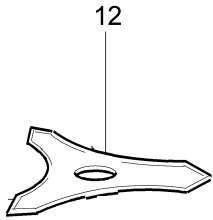
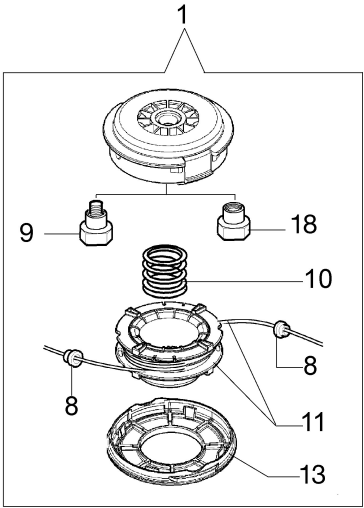
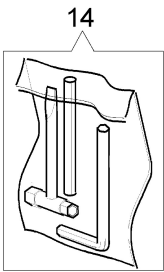

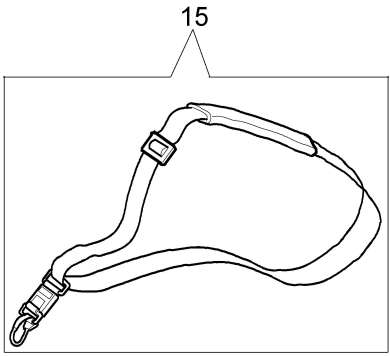
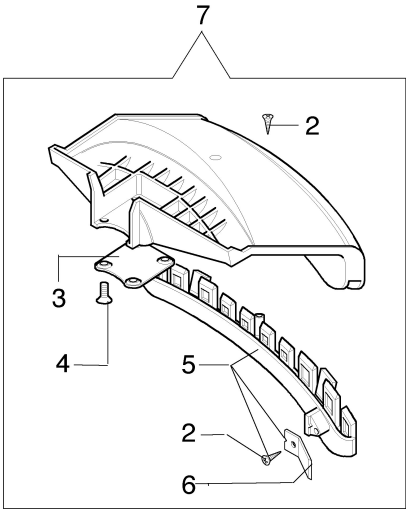


Illustration Accessories

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1		-	Not available for this product			Sostituita da testina completa codice 63019016 (inserto maschio), 63019018 (inserto femmina); Replaced by complet head p/n 63019016 (male insert), 63019018 (female insert)	
2	1	3960040R	Screw				
3	1	4174278	Plate				
4	4	3802004CR	Screw				
5	1	4174283AR	Skirt w/blade				
6	1	4174275R	Blade				
7	1	4192048CR	Disc guard				
8	2	4199005AR	Bushing				
9	1	4199008B	Insert (male)				
10	1	4199004	Spring				
11	1	4199042R	Nylon spool Ø3				
12	1	4095673B	3-tooth blade				
13	1	4199035BR	Cover				
14	1	61052031R	Tool kit				
15	1	4160463AR	Single harness				
16	1	61212061	Labels kit				
17		-	Not available for this product			Sostituita da testina completa codice 63019016 (inserto maschio), 63019018 (inserto femmina); Replaced by complet head p/n 63019016 (male insert), 63019018 (female insert)	
18	1	61110076	Insert (female)				
19	1	4199052	Nylon spool				
20	1	4199026A	Cover				
21	1	4199046	Cover				
22	1	63019018	Compl. nylon head Ø3			Inserto femmina; Female insert	
22	1	63019016	Compl. nylon head Ø3			Inserto maschio; Male insert	

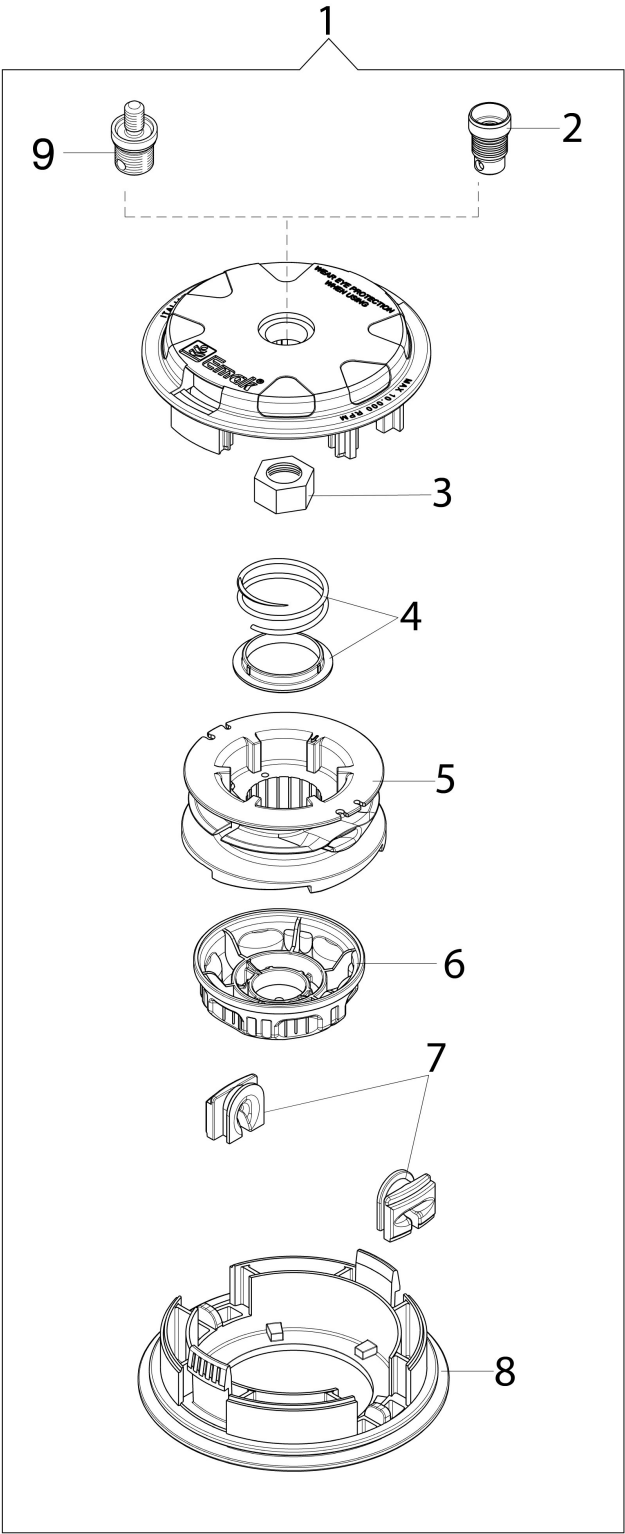


Illustration Illustrated part list (Head "Load & Go" D.130)

Ref.Nu	Qty	Part number	Description	Validity from	Validity till	Notes	Bulletin
1	1	63129007	Load & Go nylon head			Filo D.2,4 mm; Nylon line	
2	1	63120041R	Insert			D.2,4 mm	
3	1	63120040R	Nut				
4	1	63120031R	Kit spring				
5	1	63120020R	Nylon spool				
6	1	63120007R	Knob				
7	2	63120001R	Bushing				
8	1	63120005R	Cover				
9	1	63120042R	Insert				